

3-1. Using the touch screen

Touch screen

By touching the screen with your finger, you can control the audio system and air conditioning, adjust the screen display etc.

► With navigation system



ILY31S026

► Without navigation system



ILY31S024

The "Information" screen shown in the above illustration is displayed when the **INFO** button is pressed.

3-1. Using the touch screen

Switches	Page
"CLIMATE"	P. 235
"AUDIO"	P. 245
"INFO" (Displaying the "Information" screen)	P. 226
"DISP" (Adjusting the display)	P. 231
Trip information (Displaying the "Trip Information" screen)	P. 228
Maintenance	Navigation System Owner's Manual
Telephone	P. 315
Calendar	Navigation System Owner's Manual
"LEXUS Park Assist"	P. 190
Language	P. 230
Screen Setting	P. 233
Beep Off	P. 230
Adjust Clock	P. 368/ Navigation System Owner's Manual

3-1. Using the touch screen

The initial screen





If the "ENGINE START STOP" switch is set to ACCESSORY or IGNITION ON mode, the initializing screen will be displayed for a few seconds as the system starts up.


Trip information

Trip information such as driving distance, average vehicle speed, fuel consumption, etc. can be displayed on the screen. The displayed figure is for general information and may not always reflect precise and actual conditions.

n Displaying the screen


STEP 1 Press .

STEP 2 Touch  on the "Information" screen.

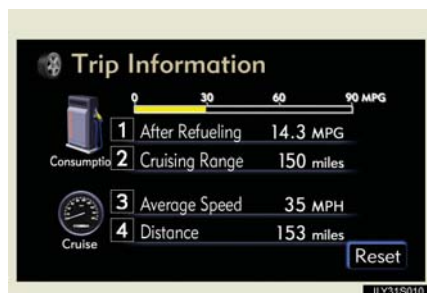

- 1 Average fuel consumption
- 2 Cruising range
- 3 Average vehicle speed
- 4 Total distance

n **Resetting the data**

Touching  will reset the "Average Speed" and "Distance".

n **To avoid damaging the touch screen**

- 1 Touch the screen lightly with your finger. If there is no response, remove your finger from the screen and try again.
- 1 Remove any dirt on the screen by wiping with a soft cloth. Do not use detergent.

n **When using the touch screen**

- 1 If the screen is cold, the display may be dark, or the system may seem to be operating slightly slower than normal.
- 1 The screen may seem dark and hard to see when viewed through sunglasses. Change your angle of viewing, adjust the display on the "Display" screen or remove your sunglasses.

3-1. Using the touch screen


Setting the touch screen

You can change the touch screen to your desired settings.


Language settings

The language used for all voice guidance, messages and touch screen switches may be changed.

STEP 1 Press .

STEP 2 Touch  on the "Information" screen.

STEP 3 Select the desired language.

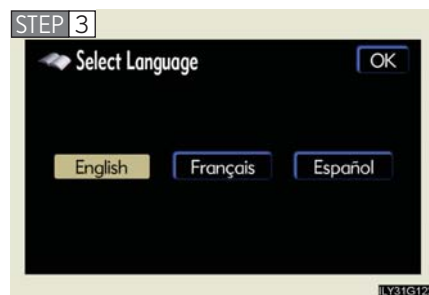


STEP 4 Touch .

Turning off the beep sound

The beep that sounds when a touch screen button is touched can be turned off.

STEP 1 Press .


STEP 2 Touch .

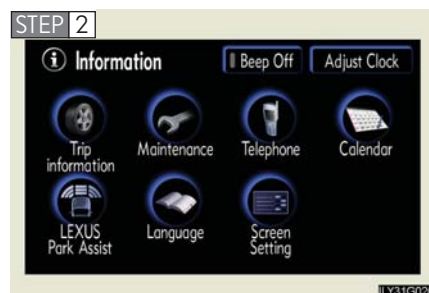

Adjusting the display

- STEP 1** Press **DISP**.
- STEP 2** Adjust the display as desired using **R / -** and **G / +**.
If you do not touch the screen for 20 seconds, the system will return to the previous screen.

► With CD player

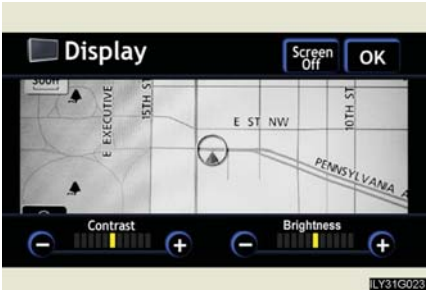

► With DVD player



	R / -	G / +
Color	Red	Green
Tone	Lighter	Darker
Contrast	Weaker	Stronger
Brightness	Darker	Brighter

3-1. Using the touch screen

n "Day Mode"



When the headlights are turned on, the screen dims. However the screen can be switched to "Day Mode".

The screen will stay in "Day Mode" when the headlights are turned on until **Day Mode** is touched again.


If the instrument panel light control is set to "MAX", "Day Mode" is not displayed.

n To turn off the picture display

If **Screen Off** is touched, the screen display is turned off, and guidance is by voice only.

Screen settings

STEP 1 Press .

STEP 2 Touch  on the "Information" screen.

The following screen settings can be changed.



1 Automatic transition

20 seconds after air conditioning or audio system use, the system will return the display to the previous screen.

2 Switch color

You can select the switch color.

3 Delete personal data

The following personal data is deleted:

- User selection settings
- Phone book data
- Dialed numbers and received calls
- Speed dial
- Bluetooth® phone data
- Security code
- Maintenance conditions*
- Maintenance information off setting*
- Memory points*
- Areas to avoid*
- Previous points*
- Route trace*

*: If the navigation system is equipped

3

Interior features

3-1. Using the touch screen

n Setting automatic transition

STEP 1 Touch **ON** or **OFF**.

STEP 2 Touch **OK**.


n Setting the switch color

STEP 1 Touch **Blue** or **Gold**.

STEP 2 Touch **OK**.

n To delete personal data

STEP 1 Touch **Delete personal data**.

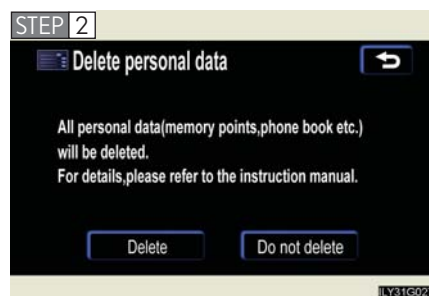

Touch **Delete**.

Check carefully beforehand, as data cannot be retrieved once initialized.

n When deleting personal data

Data can only be deleted when the vehicle is stopped.

n When selling the vehicle

Be sure to initialize both the call history and personal data. (→P. 233)

n If you touch

The display returns to the previous screen.